



RELEASED  
16.01.2051

PPP


Part Number	D212-664-107
Description	Crosstube Installation, Standard Fwd

Box Part Number	MBX103	90 x 34 x 6
Other Packaging	MF3433	MF668 / MF1612
Logo Decals		

### Packaging Instructions and Decal Placement

#### D212-664-107

Technician will apply label D2729-4 as per drawing below. Place crosstube in plastic bag. Glue foam in place ( MF3433 2 sets, 4 Pcs, MF668, 2 sets, 4 Pcs, MF1612 4 Pcs). Place hardware and paper work in Dart bag together, then wrap around left side of crosstube. Apply top portion of MF3433 and MF668 to correspond with bottom foam already in place, to close box. Apply Dart logo tape (always starting at first complete Dart logo) on top portion of box length wise. Apply strapping after first Dart logo and there after apply strapping after every second Dart logo. Apply clear tape over strapping. Apply label D2729-3 as per instructions in QSI 014. Apply clear tape over label and staple.

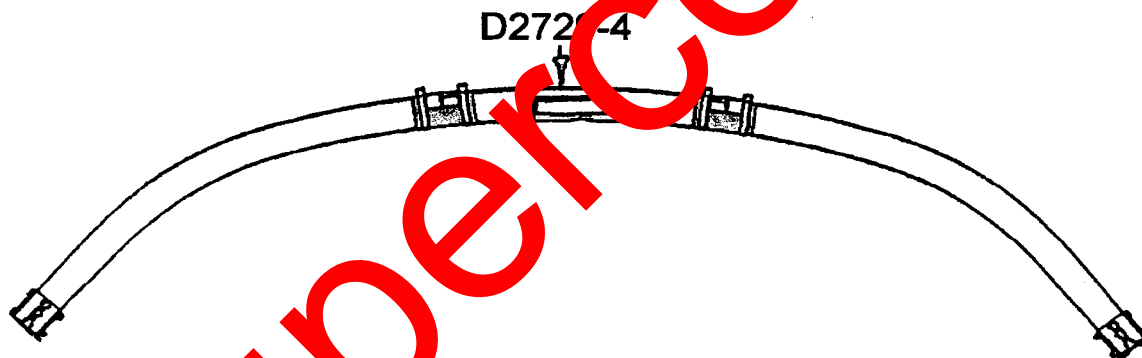

D2729-4

D2729-3

DART			
PART	N/A		
P/N	D212-664-107	QMS	CHG004
DESC	Crosstube, STD Fwd	STC	SH01-9
LOT	BXXXXXX	STC	SR01298NY
PHONE	Bell 204/205/210/212/214/412/UH-1	STC	
QC APPROVAL 7/11/89		MADE IN CANADA	

15  
9 89

16/01/21

Revision: E  
Date: 16.01.12



**Dart Aerospace Ltd.**  
1270 Aberdeen Street  
Hawkesbury, ON K6A 1K7  
CANADA  
TEL.: 1 613 632-5200

### CROSSTUBE INSTALLATION, STD FWD

P/N: D212-664-107

CHG004

B/N: BXXXXXX